Ultrasonic interface & spheres detectors Control in multiproduct pipelines



MINISONIC[®] ISD MINISONIC[®] PSD

✓ external clamp-on probe (may be burried) ✓ n

- ✓ in hazardous area : EEx 'm' protection for probe, standard or explosion-proof converter
- ✓ optional pressure and temperature compensation

Principle

MINISONIC ISD measures the speed of sound in the product. This value is a precise characteristic of the product which is associated with its density.

For both models PSD & ISD, the ultrasonic path is interrupted by the passage of the sphere (product separator) or pig even when they are travelling at high speed.

Interface & Sphere functions Spheres & Pig Detection

- \checkmark no moving parts, no wear or maintenance
- \checkmark fast response time
- ✓ high sensitivity & accuracy
- \checkmark user friendly

Typical applications

- Early warning of approaching interface of hydrocarbon products in a pipeline of refined or crude petroleum products : analysis of density, concentration and speed of sound.
- Detection of spheres or pigs

Represented by :

- Pipe sizes : 4'' to 60''
- Programmable measurement range 500-2000 m/s
- Wide range of fluids with possibility of measurement on gas (insertion probe)



Ultrasonic Measurements

MINISONIC ISD & PSD

DESCRIPTION

Using advanced acoustic-signal processing, MINISONIC ISD & PSD use the signals of the associated probe to track :

- the change of products in the pipeline : ISD
- the passages of spheres or pigs : PSD & ISD

PERFORMANCE - SPECIFICATION

- \odot Resolution of the sound speed measurement ISD : +/- 0,1 m/s (equivalent to < 10^{-4} of density) PSD : +/- 10 m/s
- \odot Response time < 1 s optimized pulse sampling rate
- Output signals :
 - serial RS 232 & 485 JBUS/MODBUS Protocol
 - 2 relays : passage of spheres even if they are touching
 - 4-20 mA for speed of sound (ISD only)
- Keyboard and PC software for user friendly calibration – LS_ISD
- Storage of the 20 last records of spheres or pigs detection in a date & time logger available for interrogation by serial link
- Two lines backlight LCD display : sound speed, counting of spheres and event messages


DIGITAL CORRECTOR M 1189N

DESCRIPTION

This equipment allows the compensation of the influence of pressure (P) & temperature (T). M1189 N exists in rack or wall mounting cabinet versions and can integrate the MINISONIC.

WWW PERFORMANCE – SPECIFICATION

- O Correction accuracy : M 1189 N : 1% or +/- 3 m/s
- Calibration with PC LS_1189N software
- O 3 analog inputs (4-20 mA) : P, T & Ie (input current)
- 1 analog output (4-20 mA) for Ic (corrected current)
- O 2 relays : detection of sphere(s) & faults
- Input-output galvanic isolation
- \odot backlight display and keyboard for the cabinet version

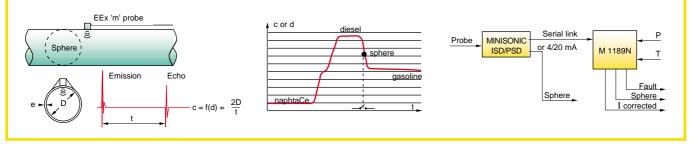

c, t : speed of sound and time of propagation in the product - d : density of the product

ELECTRICAL CHARACTERISTICS

- Power supply
 - MINISONIC : 9 to 36 VDC (25 VAC), or 18 to 60 VDC (40 VAC)
 - External transformer module for 110 V or 220 $V_{\mbox{\tiny AC}}$ supply
 - M 1189N : 110 V or 220 VAC
- $\odot~$ Output 4-20 mA / 1000 Ω galvanic isolated
- $\odot~$ 2 static relays 100 V / 100 mA/ 10 VA max.

Installation and commissionning :

- Straight pipe lengths and probe positionning not critical,
- Permanent coupling of the probe to the pipe,
- Indicate the pipe outside diameter, the wall thickness and the measurement scales.

Certifications :

MINISONIC EXD : EEX d IIC T6 – LCIE 03 ATEX 6183 Probes EEx m II T6 – LCIE 03 ATEX 6182X EEx me II T6 EEx md IIC T6 Probes EEx ia II T6 – LCIE 03 ATEX 6180X Ultrasafe zener barrier BZ01 : [EEx ia] IIB T6 – LCIE 03 ATEX 6181X

MECHANICAL CHARACTERISTICS

- O Protection and temperature classes
 - Probes : IP 68, 25°C to 50°C, EEx'm'
 - MINISONIC : IP 67, -20°C to 50°C
 - M 1189N : IP 20 (rack), IP 67 (cabinet), -25°C to 50°C
- O Dimensions Weights
 - MINISONIC : 237 x 108 x 79 mm (LxHxD) 1, 5 Kg
 - Version EXD: 244 x 130 x 232 (LxHxP) 6,6 Kg
 - M 1189N : Rack 19"- 3 U 360 mm 2,5 Kg



Le Technoparc 17, rue Charles Edouard Jeanneret - 78306 POISSY Cedex- France Tel : +33 1 39 79 26 40 - Fax : +33 1 39 79 91 22 - e-mail : ultraflux@ultraflux.fr www.ultraflux.com